

Front Seats

n Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

n Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

n Adjusting vertical height



- 1 Raises the height of the seat
- 2 Lowers the height of the seat

n Adjusting the seat cushion length (driver's seat)



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

n Adjusting the seat cushion (front) angle



- 1 Raises the front of the cushion
- 2 Lowers the front of the cushion

n Adjusting the lumbar support



► Driver's seat

- 1 Firmer
- 2 Softer
- 3 Up
- 4 Down

► Front passenger's seat

- 1 Firmer
- 2 Softer

n Operating the front passenger's seat from driver's seat or rear seat

n Seat operation switches on the side of the front passenger's seat




► Seatback angle switch

- 1 Tilts the seatback forward
- 2 Reclines the seatback

► Seat position switch

- 3 Moves the seat forward
- 4 Moves the seat backward

n Operating the front passenger's seat from the rear seat (4-seat models)

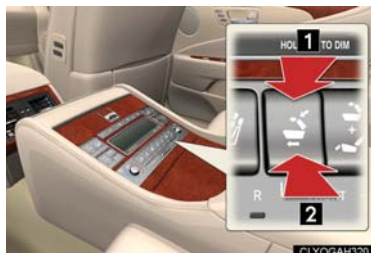

- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward
The seatback will return to the neutral position.

The operation can be performed when the "ENGINE START STOP" switch is in IGNITION ON mode.

Power Rear Seat (If Equipped on 5-seat models)



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle

n Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

Power Rear Seat (4-seat models)




- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle
- 4 Adjusting seatback angle
- 5 Adjusting ottoman angle

n Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

n Relaxation mode

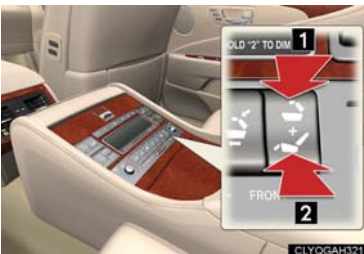

- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "ENGINE START STOP" switch is in IGNITION ON mode.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

Driving and Seat Position Memory

Your preferred driving position (the position of the driver's seat, steering wheel, angle of the outside rear view mirrors and height of seat belt) and front passenger seat position (the position of the passenger's seat and height of seat belt) can be memorized and recalled with the touch of a button.

n Setting memory positions



Press the "SET" button, then within 3 seconds press one of the memory buttons ("1", "2" or "3") until you hear a beep.

The current position is recorded.


n Recalling memory positions



Press one of the memory buttons ("1", "2" or "3").

n Linking driving position memory with door unlock operation (driver's seat)



While holding down the desired memory button, press and hold  on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

Rear Seat Position Memory (If Equipped)

Your preferred rear seat position can be memorized and recalled with the touch of a button

n Setting memory position



Press and hold the "SET" button until you hear a beep.

The current position of the seat is recorded.

n Recalling memory position




Press the "M" button until you hear a beep.

When the door is opened, the rear seat will automatically return to its neutral position.

Head Restraints


n Front seats

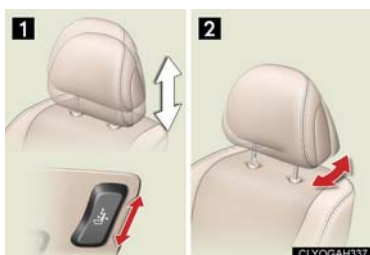

- 1 Vertical adjustment
- 2 Horizontal adjustment


n Outside rear seats

► Power type

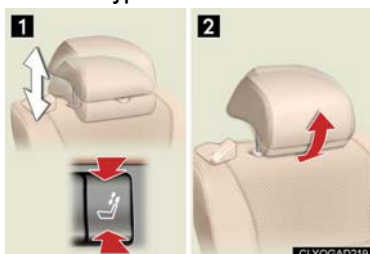


- 1 Vertical adjustment
- 2 Horizontal adjustment

► Manual type

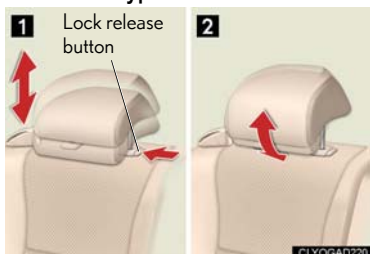

- 1 Vertical adjustment
Push and hold the lock release button when lowering.
- 2 Horizontal adjustment


n Rear center seat (5-seat models)

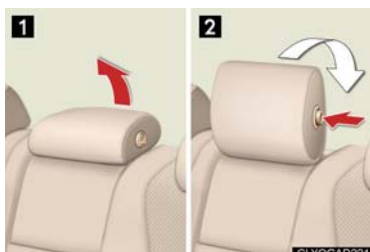

- 1 To use
- 2 To fold

Seat Belts

n Adjusting shoulder belt height (front seats)

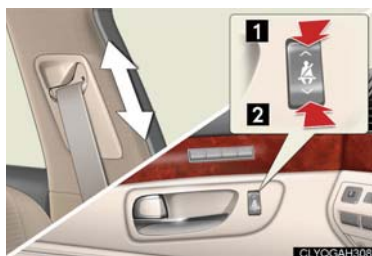

- 1 Up
- 2 Down

n Seat Belts comfort guides (outside rear seats)



If the shoulder belt sits close to the neck, slide the comfort guide forward.

Outside Rear View Mirrors



- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the mirror select switch in the neutral position (between "L" and "R").

n Folding and extending the mirrors




- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the switch in the neutral position allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.

Anti-glare Inside Rear View Mirror


The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.

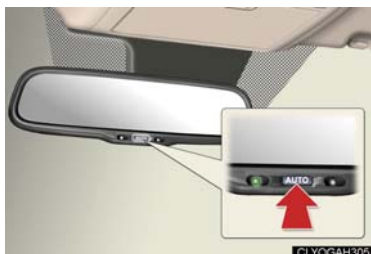

To turn automatic mode on/off, press the "AUTO" button.

The indicator comes on when automatic mode is turned on.

Steering Wheel

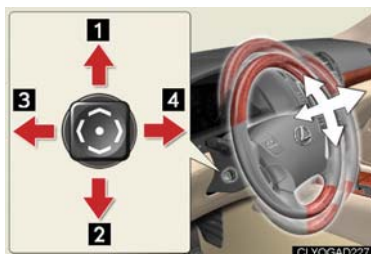

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.



Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

